

Compatibility table

Inkjet cartridges

Number of the cartridge	Color	Compatible printers
Canon		
BCI-10bk	black	Canon BJ-30/ V/ 50V/ 80V/ BJC-30 / 35V / 50 / 55 / 70 BJC-5x / 70 / 80/ 85 / W /8x/ BN-700C/ Model 1/ Model 2/ 750C/ Compri BN 700c/ 750c Fax CF H1/CF H1 CL
BCI-11B	black	Canon BJ-30V/ 50V/ 80V/ BJC-35V/ 50/ 55/ 70/ 80/ 85W/ BN-200C/ 700C/ Model 1/ Model 2/ 750C/ Compri BN 700c/ 750c
BCI-11C	color	
BC-20BK	photo black	Canon BJC- 2xx0 / 4xx0 / 5x00 / S100 / S200 / S200X / S300 / S330 Photo / i250 / i3x0 / i45x / i47xD / PiXMA iP1000 / 1500 / 2000 Canon Faxphone B740/ Panafax KX-F1600/KX-F1650/UF-342/ UF-344
BCI-21	black	
BCI-21	color	
BCI-24bk	black	Canon BJC-2000SP / 2100 / 2100SP / 2110 / 4000 / 400J / 410J / 4100 / 4200 / 4300 / 4304PHOTO / 4310SP / 4400 / 4550 / 455J / 4650 / 5000 / 5100 / 5500 / 2000 / 2010 / 2115 / 2120 / 2125 / 4200PHOTO / 4304 / 440J / 430J / 420J / 430JD LITE / 430J USB / 430J LITE Canon BJ-F210 / 465J / F200U / F200; Canon S100SP Canon Fax B740 Canon Multipass C20 / C530 / C545 / C560 / C635 / C2500 / C3000 / C3500 / C5000 / C5500 / UF-344; Apple Color StyleWriter 2400 / 2500; Panafax UF-344 / Panasonic KXF 1600 Canon S200 / S200SPx / i255 / i320 / S300 / S330 / i355 / i450 / i455 / i470D / i475D / i250 / i350 Canon Image CLASS MPC190 / MPC190s / MPC200 / MP360 / MP370 / MP390 Canon Multipass F10 / F20 / MP360 / MP370 / MP390 Canon Smart Base MPC190 / MP360 / MP370 / MP390 Canon PIXUS MP370 / MP375R / MP5 / MP10 Canon PIXMA iP1000 / iP1500 / iP2000 / MP110 / MP130 / MP410 / MP430
BCI-24C	color	
BCI-3e / 5 / 6	cyan	Canon S400 / S450 / S4500 / S500/S520/S530D/S600/S630/S630N/S750 S800 / S820 / S900 / i550 / i560 / i850 / i860 / i6500/i8650/i9100 / i9900 / i9950 / bjc-3000/3010/ 6000/6100/ /6200/6500/8200 MultiPass C100/C400/C600 F/C755/F30/F50/F60
BCI-3e / 5 / 6	magenta	
BCI-3e / 5 / 6	yellow	
BCI-3eBk	black	Canon BJC-3000 / 3010 / 6000 / 6100 / 6200 / 6500 Canon BJ-F300 / F600 / 535PD / S700 Canon S400 / S400SP / S450 / S4500 / S500 / S520 / S530D / S600 / S630 / S750 / S6300 / i550 / i850 / i6100 / i6500 / S630N / i560 / i860 / i865 / i8650 Canon Multipass C755 / F30 / F50 / MP700 / MP730 / F60 / F80 / C100 Canon Image Class MPC400 / MPC600F / MP700 / MP730 Canon Smart Base MP700 / MP730 Canon PIXUS MP55 / MP710 / MP740 / 6100i / 6500i Canon PIXMA iP3000 / iP4000 / iP4000R / iP5000 / MP750 / MP760 / MP780
BCI-3ePBk	black (photo)	
BCI-3eC	cyan	Canon BJC-3000 / 3010 / 6000 / 6100 / 6200 / 6500 Canon BJ-F300 / F600 / F6600 / F360 / F620 / F610 / F660 / F660V Canon S400 / S450 / S4500 / S630N / S630 Canon Multipass C100 / C400 / C600 F / F30 / F50 / F60/ F80 / MP700 / MP730 / C755/ Canon S800 / S820 / S820D / S830D / S900 / i900D / i950 / i960 / i905D / i990 / i965 / S9000 / i9100 / i9900 / i9950 Canon PIXMA iP6000D / iP8500
BCI-3e Y	Yellow	
BCI-3eM	magenta	
BCI-6Bk	black	Canon BJC-8200 S800 / S820 / S830D / S900 / i860 / i865 / i900D / i905 / i905D / i960 / i9100 / i9900 / i9950 / i965 PiXMA iP3000/ iP4000 /R/ iP8500 / iP6000D / MP780 / MP750 / MP760
BCI-6PC	cyan	

BCI-6PM	magenta	
BCI-6R	red	Canon i990 / i9900 / i9950 Canon PIXMA Ip8500
BCI-6G	green	Canon i9900 / i9950 Canon PIXMA iP8500
BC-02 Bk	black	Canon BJ-10e / 10ex / 10sx/ 10V/15V/ 20 / 200 / 200e / 200ex / 220JC/220JC II/5/220JS/230/220JS II /230; BJC-150/210 / 240 / 250 / 250ex/251/255 / 1000/1010; MP 1000; GW-70I/80I/HJ-100/400/100I/Privileg 2000I/200I/WP 7000/7800J/7500J/ Fax B190/B200e/B200/B200f/B200s/B220/B320/B340/B360/B405/B60/B70/B75 Faxphone B110/B140/B160/B170/B190/B200/B220; MultiPass 1000; B360 Navigator HD40/VP500; Starwriter 60 WP/70 Brother WP/80 WP/95 WP/85 WP/PRO 2000/PRO 5000/ GW-70I/ GW-80I/ HJ-100
PGI-5B	photo black	Canon PIXMA iP3300/ iP3500/ iP4200 / iP4300/ iP4500/ iP5200 / iP5200R / iP6600D / ip6700D/ MP500 / MP510/ MP 520 / MP530/ MP 600/ MP610/ MP800/ R / MP810/ MP 830/ MP950 / MP960 / MP 970/ MX 700/ MX 850
CLI-8Bk	black	
CLI-8C	cyan	
CLI-8M	magenta	
CLI-8Y	yellow	
CLI-8PC	photo cyan	Canon PIXMA iP6600D / iP6700D/ MP950/ MP 960/ MP970/ Pro9000
CLI-8PM	photo magenta	
PG-37Bk	black	Canon Pixma MP190, IP1800, IP1900, IP2500, IP2600, MP210, MP140, MP220, MP470, MX300, MX310 mini260
CL -38	color	Canon Pixma MP190, IP1800, IP1900, IP2500, IP2600, MP210, MP140, MP220, MP470, MX300, MX310
PG-40Bk	black	Canon PIXMA MP140-180/ MP 210/ MP450-470 / MX 300 /MX310/ iP6220D/iP6210D/ iP6310 /iP2200/ IP2600/iP1600/IP1700/iP1800
CL-41Bk	color	
Epson		
S020025	black	Epson MJ-400 / 450 / 500V2 / 1000 / 1000V2 / 1010 / 1050 / 1050V2 / 1100 Stylus 400 / 800 / 800+ / 1000 / 1000+;SEIKE MJ 1000 / BJ500
S020047 S020093	black	Epson MJ-500C / 510C / 510CS / 800C Epson Stylus Color 200 / II / IIs;/ 400/ 500/ 600/ 600Q Epson Stylus 200 / 820 Stylus Photo 700/ 710/ EX/ EX2 PM 2000 C/ PM 700/ PM 670 C
S020049	color	Epson Stylus Color II / IIs / 820 / 1500 Epson Stylus 1500 / 1500K Epson MJ-500C / 800C / 850K / 1500K / 1500k+ / 3000C / 30000CU
S020062	black	Epson Stylus Color 1500 / 1500K, SQ 870 / 1170 / 2570 MJ-850K / 1500K / 1500k+ / 3000C / 3000CU
S020138	black / color	Epson Stylus Color 300
C13T003011	black	Epson Stylus Color 900 / 900N / 900G / 980 / 980N
C13T005011	color	
C13T003012	black	Epson Stylus Photo 900 / 1270 / 1275/ 1280 / 1290 / 1290s
C13T008401	black	Epson Stylus Photo 780 / 785EPX / 790/ 825 / 870 / LE / 875 DC / DCS / 890 / 895 / 900 / 915 / 1290 / 1290s / Photo 790 / 1270/ 2000P
C13T008403	color	

C13T017402	black	Epson Stylus Color 680 / 680T / 685 / 777 / 777i / 1000 / ICS
C13T018401	color	
C13T019402	black	Epson Stylus Color 8/ 830 / 880 / 880i / 880T
C13T020401	color	
C13T026401	black	Epson Stylus Photo 810 / 820 / 830 / 830U / 925 / 935 Epson Stylus C50
C13T027401	color	
C13T028401	black	Epson Stylus C50 / C60 / C61 / CX3100
C13T029401	color	Epson Stylus C50 / C60 / C61 / CX3100
C13T032142	black	Epson Stylus C70 / C80 / C80N / C80WN / C82 / C82N / C82WN / C90 / CX5100 / CX5200 / CX5300 / CX5400
C13T032240	cyan	Epson Stylus C70 / C80 / C80N / C80WN / C90
C13T032340	magenta	
C13T032440	yellow	
C13T033140	Black	Epson Stylus Photo 910/ 950 / 960
C13T033240	Cyan	
C13T033340	Magenta	
C13T033440	Yellow	
C13T033540	light cyan	
C13T033640	light magenta	
C13T036140	black	
C13T037040	color	Epson Stylus C42 Plus / C42S / C42SX / C42UX / C44UX / C46
C13T03814A	black	Epson Stylus Color C41UX / C41SX / C43UX / C43SX / C45UX / C45 / CX1500 / CX1500V
C13T03904A	color	
C13T040140	black	Epson Stylus C62 / CX3200
C13T041040	color	
C13T032142	black	Epson Stylus C70/C70 PLUS /C80 /C80n /C80wn / C82 / n /wn / CX5100 / CX5200 / CX5300 / CX5400
C13T032240	cyan	
C13T032340	magenta	
C13T032440	yellow	
C13T043140	Black	Epson Stylus C84 / C84N / C84WN / C86 / CX6400 / CX6600
C13T044240	Cyan	Epson Stylus C64 / C66 / C84 / C84N / C84WN / C86 / CX3650 / CX4600 / CX6400 / CX6600
C13T044340	Magenta	
C13T044440	Yellow	
C13T04614A	Black	Epson Stylus C63 / C83 / C65 / C85 / CX6300 / CX6500 / CX3500 / CX4500
C13T04724A	Cyan	
C13T04734A	Magenta	
C13T04744A	Yellow	
C13T048140	Black	Epson Stylus Photo R200 / R300 / R300M / R320 / RX500 / RX600 / RX620

C13T048240	Cyan	
C13T048340	Magenta	
C13T048440	Yellow	
C13T048540	Light cyan	
C13T048640	Light magenta	
C13S020093	Black	Epson Stylus Color 400 / 440 / 460 / 480 / 480SX / 500 / 580 / 600 / Q / 640 / 800 / n / 850 / n / ne / 1520 Stylus Photo 700 / 750 Stylus 200/ C20 / C20UX / C40 / C40UX
C13S020089	color	
C13S020189 C13S020209	Black	Epson Stylus Color 740 / 760 / 800 / 850 / 1520 Stylus Scan 2000 / 2500 Epson Stylus Color 1160 / 440 / 640 / 460 / 660 / 670 / 740 / 760 / 740i / 810 / 840 / 860 / 840i Stylus Scan 2000 / 2500 / 2500 Pro
C13S020191	color	
C13T013402	black	Epson Stylus C20 / C20SX / C20UX / C40 / C40SX / C40UX / C40cs Stylus Color 480 / 480sx / 480sxu / 580
C13T014401	color	
C13T053040	color	Epson Stylus Photo EX / EX2 / EX3 / 700 / 710 / 720 / 750 / 750MILLENNIUM Epson PM-600C / 670C / 680C / 700C / 750C / 770C / 2000C Epson IP-100 (S020110, S020193) / SQ 1170 / 2570 / 870
T055140	black	Epson Stylus Photo R240 / R245 / RX420 / RX425 / RX520
T055240	cyan	
T055340	magenta	
T055440	yellow	
T06314A	black	Epson Stylus C67 / C87 / CX3700 / CX4100 / CX4700
T06324A	cyan	
T06334A	magenta	
T06344A	yellow	
T066	black	Epson Stylus C48
T067	color	
E-100	black / color	Epson Picturemate E-100
T07314A	black	Epson Stylus C79 / CX3900 / CX3905 / CX4900 / CX4905 / CX5900 / CX6900F
T07324A	cyan	
T07334A	magenta	
T07344A	yellow	
T08214A	black	Epson Stylus Photo R270 / 290 / 390 / RX590
T08224A	cyan	
T08234A	magenta	
T08244A	yellow	
T08254A	light cyan	
T08264A	light	

	magenta	
T09214A	Black	Epson Stylus C91 / CX4300
T09214A	Cyan	
T09214A	Magenta	
T09214A	Yellow	
Перепрограмматор чипованных картриджей Epson (universal chip resetter)		
HP		
HP 26	black	DJ 400 / 400L / 420C / 450Cbi / 450Ci / 500 / 500C / 510 / 520 / 540 / 550C / 560C DW 400 / 510 / 520 / 540 / 550 / 560C Office Jet 300/ 310/ 320/ 330/ 350/ LX/ MFP/ Personal/ VP
HP 25	color	DJ 200/ 310/ 320/ 330/ 340/ 340cbi/ 340cm/ 340cv/ 400/ c/ i/ l/ p/ 500c/ 420c/ 520/ 540c/ 550c/ 560c/ j/ Office Jet VP
HP 29	black	DJ 600/C / cse/ 670C / tv / 672/ c / 680/ c / 682/ 690C Series /692 /693 /694/ / 695C / cci / 697C; / Office Jet 500/ 520/ 570/ 580/ 590/ 600/ 610/ 630/ 635/ 700/ 710/ 720/ 725 Fax 910 /920
HP 49	color	DJ 350c/ 350cbi/ 600/ c/ 610/ c/ cl/ 612/ c/ 630/ c/ 632/ c/ 640 / c/ 642/ c/ 648/ c/ 656/ c/ cvr/ 660c/ cse/ 670/ c/ tv/ 672/ c/ 680/ c/ 682/ c/ 690/ c/ 692/ c/ 693/ c/ 694/ c/ 695/ c/ cci/ 697/ c/ OfficeJet 500/ 520/ 570/ 580/ 590/ 600/ 610/ 630/ 635/ 700/ 710/ 720/ 725 PSC 300/ 370/ 380
HP 20	black	DJ 610/ 610C / 640C /cl /612/ c/ 630/ c/ 632 /c / 640/ c /642 /c /648 / c / 656 /c / cvr/ 615C Apollo P-2100u/ P-2150u/ P-2200/ P-2250/ P-2600/ Fax 1010/ 1010xi/ 1020/ 1020xi/ 1040
HP 15	black	DeskJet 3820/ 3822/ 810c/ 812c/ 825c/ cvr/ 840/ 842c/ 843c/ 845c/ cvr/ 920c/ cvr/ cw/ cxil/ 940c/ cvr/ 948 / PSC 500xi/ 700/ 750xi/ 900/ 940/ 950/ vr/ xi Office Jet 1510 A2L/ 5110v/ xi/ V20/ V40/ V40xi/ V45 / Fax 1321 / xi
HP 74	black	DeskJet D4200/D4260/D4263/D4268/D4280/D4360/ Photo Smart C4200/ C4210/C4225/C4235/C4240/C4250/C4270/C4272/C4273/C4275/C4280/C4283/C4285/ C4288/C4293/C4294/C4300/C4380/ C4382/C4383/C4384/C4385/C4388/ C4440/C4450 C4472/C4473/C4480/C4483/C4485/C4580/C4583/C4585/C4599/C5200/C5225 Office Jet J5700/ J5725/ J5730/J5735/J5738/J5740/J5750/ J5780/J5785/J5788/J5790
HP 75	color	
HP 78	color	DJ 845 /920C / cw /Cxi / CVr / 930C / CM / Photo / 932C / 934c / 935C / 940C / CVr / 948C / 950C / 952C / 955C /959c / 960C / Cxi / Cse / 970C / Cxi / Cse / 980CXi / 990c /CSe / Cxi / 995C / ck /1220C /c- ps / Cse / Cxi / 1180C / 1280 / 3820 / 3822 / 6127 / 6122 / 9300 / P1000/P1100 /P1100xi Office et 1510 A2L/ v/ xi/ G55/ xi/ G85/ xi/ G95/ K60/ xi/ K80/ xi/ V20/ V40/ xi/ V45 PSC 700/ 750/ xi/ 900/ 940/ 950 /xi/ vr / Fax 1220 / xi
HP 23	color	DJ 710c/ 712c/ 722c/ 720c/ 782c/ 810C / 81 2C / 815c/ 825C / CVr / 830c/ 832c /840C / 841C / 842C / 843C / 845C / CVr / 880c 882c / 855C / 870CSe / Cxi / 880C / 882C / 890CSe / Cxi / 895CSe / Cxi / 920C / 940C / 1000CSe / Cxi / 1100C / 1120CSe / Cxi / 1125c / 1220C / Cxi / Cse / 1600C / 3820 Office Jet Pro 1120c/ cse/ cxil/ 1170/ c/ cse/ cxil/ 1175/ c/ cse/ cxil/ R65/ R80/ R80xi/ R40/ R40xi/ R45/ R60/ T45/ T45xi/ T65/ T65xi / PSC 500 /xi
HP 45	black	DJ 1000c/ cse/ cxil/ 1100c/ cse/ cxil/ 1120c/ cse/ cxil/ 1125c/ 1150cxi/ 1220c/ c-ps/ cse/ cxil/ 1250/ 1600c/ cm/ cn/ 6122/ 6127/ cxil/ 712c/ 720c/ 722c/ 782c/ 815c/ 820c/ cse/ csi/ cxil/ 830c/ 832c/ 850c/ cxil/ 855c/ cse/ csi/ cxil/ 870c/ cse/ 710c/ 880c/ 882c/ 890c/ cm/ cse/ cxil/ 895c/ cse/ cxil/ 930/ c/ 932c/ 934c/ 935c/ 950c/ 952c/ 959c/ 960c/ cse/ cxil/ 970c/ cse/ cxil/ 980c/ cxil/ 990c/ cm/ cse/ cxil/ 995c/ ck/ P1000/ P1100/ xi Office Jet G55/ xi/ G85xi/ G95/ K60/ xi/ K80xi/ Pro 1120c/ cse/ cxil/ 1150c/ cse/ cxil/ 1170c/ cse/ cxil/ 1175c/ cse/ cxil/ R40xi/ R45/ R60/ R65/ R80/ xi/ T45/ xi/ T65xi / Fax 1220xi

HP 41	color	DJ 1000/ cxi/ c/ cse/ 1100c/ cse/ cxi/ 1150cxi/ 820c/ cse/ csi/ 850c/ cxi/ 855/ c/ cse/ csi/ cxi/ 870c/ cse/ cxi/ Office Jet Pro 1150c/ cse/ cxi
HP 17	color	DJ 825C / CVr / 840C / 841C / 842C / 843C / 845C / CVr
HP 15	black	DeskJet 3820/ 3822/ 810c/ 812c/ 825c/ cvr / 840c/ 841c/ 842c/ 843c/ 845c/ cvr/ 920c/ cvr/ cw/ cxi/ 940c/ cvr/ 948; Office Jet 1510 A2L/ v/ xi/ V20/ V40/ V40xi/ V45; PSC 500/ xi/ 700/ 750xi/ 900/ 940/ 950/ vr/ xi; Fax 1230xi
HP 56	black	DJ 450/ Mobile/ cbi / cl / wbt / 5150 / 5550/ v / w/ 5551/ 5552/ 5600/ 5650/ w/ 5652/ 5850w/ 9600/ 9650/ 9670/ 9680/ Office Jet 2110/ 4110/ v/ xi/ 4215/ v/ xi/ 4219/ 4255/ 5505/ 5510/ v/ xi/ 5605/ xi/ 5610v/ 6100/ 6110/ xi/ 6127/ 6612
HP 57	color	PSC 1110/ 1200/ 1209/ 1210/ 1210 A2L/ v/ xi/ 1300/ 1310/ 1311/ 1315v/ xi/ 1350v/ xi/ 2100/ 2110/ v/ xi/ 2170/ 2175/ v/ xi/ 2200/ 2210/ v/ xi/ 2405/ 2410/ v/ xi/ 2420/ 2510/ xi
HP 58	color	HP Desk jet 920c/930c/930 chipo/950c/970cxi/990cxi/9300c/6122/1180c/1220c/3820 HP PSC 750/950/ HP Office jet v40/5110 HP Design jet 5550/5652/5160/9650/ HP Photo smart 7150/7260/7550/7660/7960 HP Office jet 4110/4255/6110/ HP Officejet PSC 1110/1210/1350/2110/2210/2310/2410/2510
HP 21	black	DeskJet 3910/ 3915/ D2345/ 3930/ v/3940/ v/ D1311/ D1320/ D1330/ D1338/ D1341/ D1360/ D1368/ D1420/ D1455/ D2320/ D2330/ D2338/ 3920/ D2360/ D2368/ D2430/ D2445/ D2460/ F2110/ F2120/ F2128/ F2140/ F2180/ F2187/ F2188/ F300/ F310/ F325/ F335/ F340/ F350/ F370/ F378/ F380/ F385/ F388/ F390/ F394/ F4135/ F4140/ F4150/ F4172/ F4180
HP 22	color	Office Jet 4310/ 4311/ 4315/ v/ xi/ 4350/ 4355/ 4357/ 4359/ J3680 PSC 1401/ 1402/ 1403/ 1406/ 1408/ 1410/ v/ xi/ 1417 Photo Smart D1430/ D1445; Fax 1250
HP 27	black	DJ 3320 / 3322/ 3325 / 3420 / 3425 / 3450/ 3520/ v/ 3550 / 3620/ v/ 3650/ v/ 3651/ Fax 1240/ 3653/ 3740/ v/ 3745v/ 3747/ 3843/ 3845/ xi/ 3847
HP 28	color	PSC 1209/ 1311/ v/ 1315/ xi / Fax 1240
HP 92	black	DeskJet 5420/ v/ 5440v/ xi/ 5442/ 5443/ D4145/ D4155/ D4160/ PSC 1504/ 1507/ 1508/ 1510/ v/ xi
HP 93	color	
HP 95	color	HP DeskJet 460 series/5740 series/5740xi/5743/5745/5748/5940series/6520series/6540series/6620 Photo Smart 2570/2575series/2610series/2710series/325series/375series/385series/475series/7850/8050
HP 99		Office Jet 6200series/6210series/6300/6310/ 7210series/7310 PSC 1600/1610series/ 2350/2355series
HP 98	black	DeskJet D4160 Photo Smart 2570/ 2575series/C4140/C4150 Office Jet 6300/OfficeJet 6310
HP 02	black	Photo smart 3200/ 3110/ 3210/ v / xi/ 3213/ 3310/ xi / 3313/ 8200/ 8230/ 8250/ v/ xi/ 8253/ C/ 5140/ C/ 5150/ C/ 5170/ C/ 5180/ C/ 5190/ C/ 6100/ C/ 6150/ C/ 6160/ C/ 6170/ C/ 6175/ C/ 6180/ C/ 6185/ C/ 6200/ C/ 6240/ C/ 6250/ C/ 6270/ C/ 6275/ C/ 6280/ C/ 6285/ C/ 7150/ C/ 7170/ C/ 7180/ C/ 7250/ C/ 7280/ C/ 7283/ C/ 8100/ C/ 8150/ C/ 8180/ D6160/ D7145/ D7155/ D7160/ D7200/ D7245/ D7255/ D7260/ D7263/ D7268/ D7275/ D7288/ D7345/ D7355/ D7360/ D7400/ D7460
HP 02	cyan	
HP 02	magenta	
HP 02	yellow	
HP 02	photo cyan	
HP 02	photo magenta	
HP 132	black	
HP 136	color	HP DeskJet D4163

HP 138		HP Photo smart 2570 series/ 2573 / C3183, Office Jet 6313, DeskJet 5443, PSC 1513
HP 140	black	HP DJ D4263, OJ J5783, J6413, PhSm C4283, C4383, C5283, D5363 (CB335HE) HP 140
HP 141	color	HP DJ D4263, OJ J5783, J6413, PhSm C4283, C4383, C5283, D5363
HP 336	black	HP Desk jet 5440/D4160/ Office jet 6310/6315 Photo smart 2570/2575/2710/7850/C3170/C3180/C3190 HP PSC 1507/1510/1510S
HP 342	color	HP Desk jet D4160/5440/ Office jet 6310/ Photo smart 2575/C1380/C4180/7850/ HP PSC 1510/1510S
HP 337	black	HP Deskjet 5940/ Photosmart 8050/8750 / PSC 2575
HP 338	black	HP Desk jet 460c/460cb/460wbt/5740/5745/6520/6540/6540d/6620/6840/9800/9800d Office jet 6205/6210/6215/7210/7310/7410 Photo smart 2575/2610/2710/C3180/7850/8150/8450/8450gp/8750/8750gp HP PSC 1510/1510s/1600/1610/2350/2355/2355p
HP 343	color	
HP 339	black	HP Desk jet 5740/5745/5940/6520/6540/6540d6620/6840/6940/6950/6980/9800/9800d Office jet 6310/6315/77210/7310/7410 Photo smart 2575/2610/2710/8050/8150/8450/8450gp/D5160/ProB8350
HP 344	color	HP Desk jet 5740/5745/6520/6540/6620/6840/9800 Office jet 6210/7210/7310/7410/ Photo smart 325/375/2610/2710/8150/8450/8750 HP PSC 1610/2350/2355
10N0016	black	HP i3 / Z13 / Z23 / Z24 / Z25 / Z33 / Z34 / Z35 / Z515 / Z600 / Z601 / Z602 / Z603 / Z605 / Z615 X75 / 115 / 1180 / 2250
10N0026	color	
LC900Bk	black	DCP-110C / 310CN / 120C / 115C / 116C / 117C / 315CN / 3400W MFC-210C / 215C / 410CN / 420CN / 425CN / 610CLN / CLWN / 615CL / 620CLN / CN / 640CW / 830CLN / CLWN / 3240C / 3340CN / 5440CN / 5840CN
LC900C	cyan	
LC900M	magenta	
LC900Y	yellow	
LC1000Bk	black	DCP-130C / 330C / 750CW / MFC-240C / 660CN / 3360C / 5460CN
LC1000C	cyan	
LC1000M	magenta	
LC1000Y	yellow	

Lazerjet printers

Code of the original	Compatibility
Canon	
E16	Canon FC-200/210/230/310/320/325/330/330L/530/550/PC920
EP-22	Laser Shot LBP-800, LBP-810, LBP-1120 HP LJ1100 / 1100A/ 3200
EP-E 92298A	Canon EP-E/LBP-1260/1260C/1260PLUS/1260T/8 IV/860/P430 (EX) P-270/P-445/P-430
E26/27	Canon LBP-3200/MF 3110/icMF3112/ 5630/ 5650/ 5730/ 50/70
E30/E31 E40	Canon FC-140/204/220/300/310/320/325/330/330L/355/400/420/425/428/430/530/550 Canon PC-710/720/730/735/740/745/760/770/775/780/785/790/795/860/880/890/920/921/950/979/980

HP	
92274A	HP LaserJet 4l/4lc/4ml/4mp/4p Canon LBP-430/4U/PX/PX II/P90
92298A	HP LaserJet 4/4M/4M PLUS/ 4 PLUS/ 5/ 5M/ 5n/5se/6 Canon LBP-8/ EX/ Mark IV
92298X	
C3906A	HP LaserJet 5L/5L XTRA/5LFS 5ML/6L/6LSE/6LXI/6PSE/6PS/ 3100/3100SE/3100xi/3150/3150se/3150xi/3994A/3996A Canon LBP-440/445/460/465/660/AX/EX/Laser Class 4000/4500 (FX3) FAX L6000 (FX3) Epson PageJet 400/500
C 3909A	HP LaserJet 5sl/5sl Mx/5sll/5slnx/8000/8000dn/ 8000n/ 8050 series (wx)/LaserJet Mopier 240
C4092A	HP LaserJet 1100/1100A/3100/3200/1100ASE/1100AX Canon LBP-800/810/1110/1120/22X/250/350/ P-420
C4096A	HP LaserJet 2000 series/ 2100 series/ 2200 series Canon LBP-1000/1360/32X/470/ P-100
C 4127X	HP LaserJet 4000/4000n/4000se/4000t/4000tn/4050/4050n/4050t/4050tn Canon LBP-52X Brother HL- 2460/2460N
C4129X	HP LaserJet 5000/5000N/5000GN/5100 series Canon LBP- LBP-1820/LBP-1620/LBP-1810/LBP-1610/ 62X/CR-G*H/ LBP-840/LBP-850/LBP-870/ LBP-880/ LBP-910 / Image class 2200/2210/2220/2250 / FP 300/400
C 4182X	HP LaserJet 8100/8100dn/8100n/8150/8150dn/8150hn/8150MFP/8150n/Mopier 320 Canon LBP 1910/3260/72X/950/ Image class 4000 / Image runner 3250
C7115A	HP LaserJet 1000/1005/1200series/1220series/3310/3320MFP/3300series/3320/3320n/3330MFP/3380 Canon LBP-1210
C 7115X	
C8061X	HP LaserJet 4100/ 4100n/ 4100tn/ 4100dtn/ 4100mp/4101
8543X	HP LaserJet 9000 series
Q 1338A	HP LaserJet 4200/4200n/4200tn/4200dtn/4200dtns/4200dtns 1
Q 1339A	HP LaserJet 4300/4300n/4300tn/4300dtn/4300dtns
Q2610A	HP LaserJet 2300/2300D/2300L/2300N/2300DN/2300DTN
Q2612 EP-703	HP LaserJet 1010/1012/1015/1018/1020/1022/M1005/M1319/3010/3015/3020/3030/3050/3050z /3052/3055/ Canon LBP 2900/ 3000
Q2613A	HP LaserJet 1300/1300n
Q2613AX	
Q2624A	HP LaserJet 1150/1150N
Q2624X	
CB435A	HP LaserJet P1005/P1006/P1007/ P1008
CB436A	LaserJet M1120/M1120N/ P1505N/M1522NF MFP/ P1505/M1522N MFP
Q5942A	LaserJet 4250 series/4350 series
Q5942X	
Q 5945A	HP LaserJet 4335 series/4345 series
Q5949A	HP LaserJet 1320/1320N/1160/1160LE/3390/3392
Q5949X	

Q6511A	HP LaserJet 2400/2410/2420/2420d/2420n/2420dn/2420dtn/2430n/2430t/2430tn/2430dtn
Q6511X	
Q 7516A	5200 series
Q7551A	HP LaserJet P3005 / 3005D / 3005N / 3005DN / 3005X / M3027 / MFP / M3035MFP / M3035XS MFP
Q7551X	
Q7553A	HP LaserJet P2015/2015d/2015n/2015x/2015dn /M 2727 MFP
Q7553X	
Brother/Xerox/Sumsung/Lexmark	
TN-350	Brother TN-2075, HL-2030R/2040R/2070NR MFC-7220/7225N/7420/7820N/ DCP-7010/7020/7025/ Intellifax 2820/2920
TN 430	Brother HL 1030/ 1230/ 1240/ 1250/ 1270N/ 1440/ MFC 9650/ 9660/ 9750/ 9850 Fax 8350P/ 8360P/ 3750P
Rank Xerox P8e	Rank Xerox P8e/P8ex Workcenter385
13R00625	Xerox Work Centre 3119 Samsung SCX-4200/ Samsung SCX-D4200A
109R00748	Xerox Phaser 3116, WorkCentre PE114e
013R00606	Xerox WorkCentre PE120/ PE120i
Samsung ML-1610	Samsung ML-1610/ 1615/ 1620/ 2010, SCX-4521F DELL 1100 Xerox Phaser 3117
Samsung ML-1710	Samsung ML-1410/ 1500/1510/1520/1710/ P/ B/ D/ 1730/ 1740/1750/1755 SCX4100/ 4216/ 4016/4110/4210
Samsung ML-2250	SAMSUNG ML-2250/ 2251n/ 2251np/ 2252w DELL 1600/ 1600n
Samsung ML-1210	SAMSUNG ML-1010/ 1020m/ 1210/ 1220/ 1250/ 1430/ 4500/ 4600/ 5600/ SF-5100p/ 530/ 535e/ ML-808 LEXMARK E210 XEROX 3110/ 3210
Samsung SCX-4200	Samsung SCX-4200

Color lazerjet printers

Code of the original	Color	Ccompatibility
HP		
Q3960A C9700A	Black	HP Color LaserJet 1500/ 2500/ 2550 series/ 2820/ 2840 Series CANON LBP5200
Q3961A C9701A	Cyan	
Q3962A C9702A	Yellow	
Q3963A C9703A	magenta	
Q6000A	Black	HP Color LaserJet 1600/2600n/ 2605 series/ CM 1015/CM 1017
Q6001A	Cyan	

Q6002A	Yellow	
Q6003A	Magenta	
Q7560A	Black	HP Color LaserJet 3000 series
Q7561A	Cyan	
Q7562A	Yellow	
Q7563A	Magenta	
Q2670A	Black	
Q2671A	Cyan	HP Color LaserJet 3500 series/ 3550 series
Q2672A	Yellow	
Q2673A	Magenta	
Q6470A	Black	
Q6471A	Cyan	HP Color LaserJet 3600 series
Q6472A	Yellow	
Q6473A	Magenta	
Q2670A	Black	
Q2681A	Cyan	HP Color LaserJet 3700 series/ 3750 series
Q2682A	Yellow	
Q2683A	Magenta	
Q6470A	Black	
Q6481A	Cyan	HP Color LaserJet 3800 series/ CP 3505 series
Q6482A	Yellow	
Q6483A	Magenta	
C4191A	Black	
C4192A	Cyan	HP Color LaserJet 4500 series/ 4550 series Canon LBP 2040/2050
C4193A	Magenta	
C4194A	Yellow	
C4195A	Black	
C9720A	Black	
C9721A	Cyan	HP Color LaserJet 4600 series/ 4650 series Canon LBP 2510/ Image class C2500
C9722A	Yellow	
C9723A	Magenta	
Q5950A	Black	
Q5951A	Cyan	HP Color LaserJet 4700 series
Q5952A	Yellow	
Q5953A	Magenta	
C9730A EP-86	Black	
C9731A	Cyan	
C9732A	Yellow	

C9733A	Magenta	HP Color LaserJet 8500 series/ 8550 series Canon LBP 2160/2200/2260 series/ 2300/2360 Image runner C 2100/ Image class C 2100
C4149A	Black	
C4150A	Cyan	
C4151A	Magenta	
C4152A	Yellow	
C4153A	Black	
CB540A	Black	
CB541A	Cyan	
CB542A	Yellow	
CB543A	Magenta	
13R00625		Xerox phaser 3119
CLP-300 B	black	Samsung CLP-300 / CLP-300N/ CLX-3160FN / CLX-3160N
CLP-300 C	cyan	
CLP-300 Y	Yellow	
CLP-300 M	Magenta	
CLT-409	black	Samsung CLP-315. CLP-350N CLP-600. CLP-600N CLP-650N CLP-660N
CLT-409	cyan	
CLT-409	magenta	
CLT-409	yellow	
106R01274	black	Xerox Phaser 6110/ 6110 MFP
106R01271	cyan	
106R01272	magenta	
106R01273	yellow	
106R00672	black	Xerox Phaser 6200/6250
106R00673	cyan	
106R00674	magenta	
106R00675	yellow	